

How to record your WEFT show onto an audio CD

IMPORTANT


Before you begin:

- On the studio board, turn on **PROGRAM 2** on every channel you want recorded (mics, CDs, AUX, etc.), **in addition to PROGRAM 1**.

(PROGRAM 1 is the output to the transmitter; PROGRAM 2 is a parallel output to the recording decks.)

- Use a CD-RW or a blank CD-R only.
(You can erase a CD-RW in this deck using the Erase* button. When prompted, push the knob at the end of the row to confirm.)
- These instructions result in a standard audio CD only.
When recorded on a CD-R, the burned CD should play on a home, car, or portable stereo.
- Maximum recording time per CD is 74 minutes.
NOTE: It takes 3-4 minutes to finalize, burn, and switch out CDs.

To begin recording:

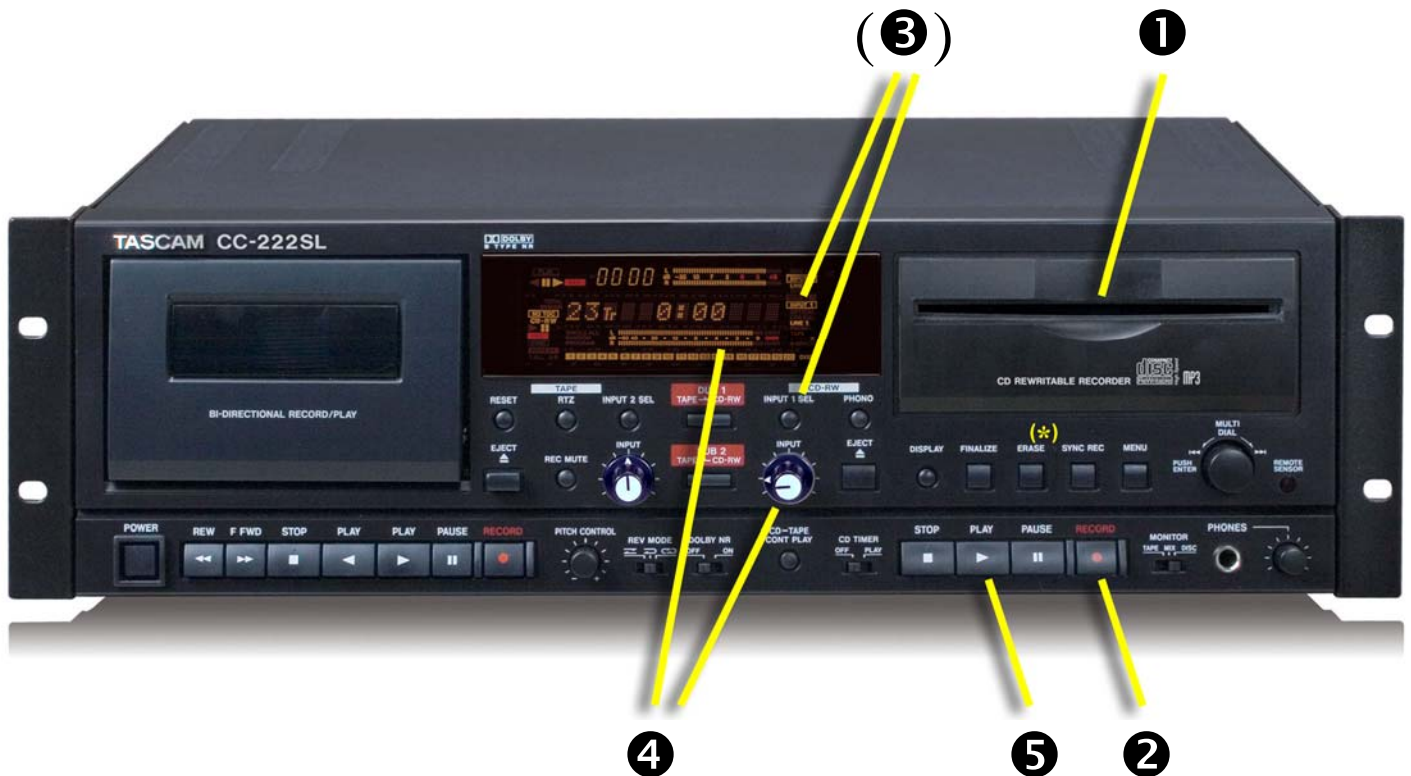

- 1 Push CD gently into the slot until the deck grabs it.
- 2 Press **RECORD**. Wait about 20 seconds for the deck to initialize the CD.
(Display reads "Now OPC" until ready.) **The deck will remain on pause.**

- 3 If needed (which is rarely), push the **INPUT 1 SEL** button repeatedly until **Li ne 1** is shown in the display.

If the **PROGRAM 2** buttons are properly selected on the board channels, and the input knob 4 is not turned all the way down, you should now see signal levels from the board on the deck display.

- 4 Adjust the **INPUT** knob so that your peak recording levels shown in the display do not exceed the levels shown in this picture.


Note that the input is "hot" -- you probably will not need to turn the input knob any higher than shown here. If your recording levels go into the red, your audio will be ruined by digital distortion! There is no fixing it!

- 5 Press **PLAY** to begin recording.

Check on the display that the time is counting, and that your input level is not in the red during loud parts.

*Note: You can press the **RECORD** button at any time during recording to mark a new track on the CD.*

To finish recording:

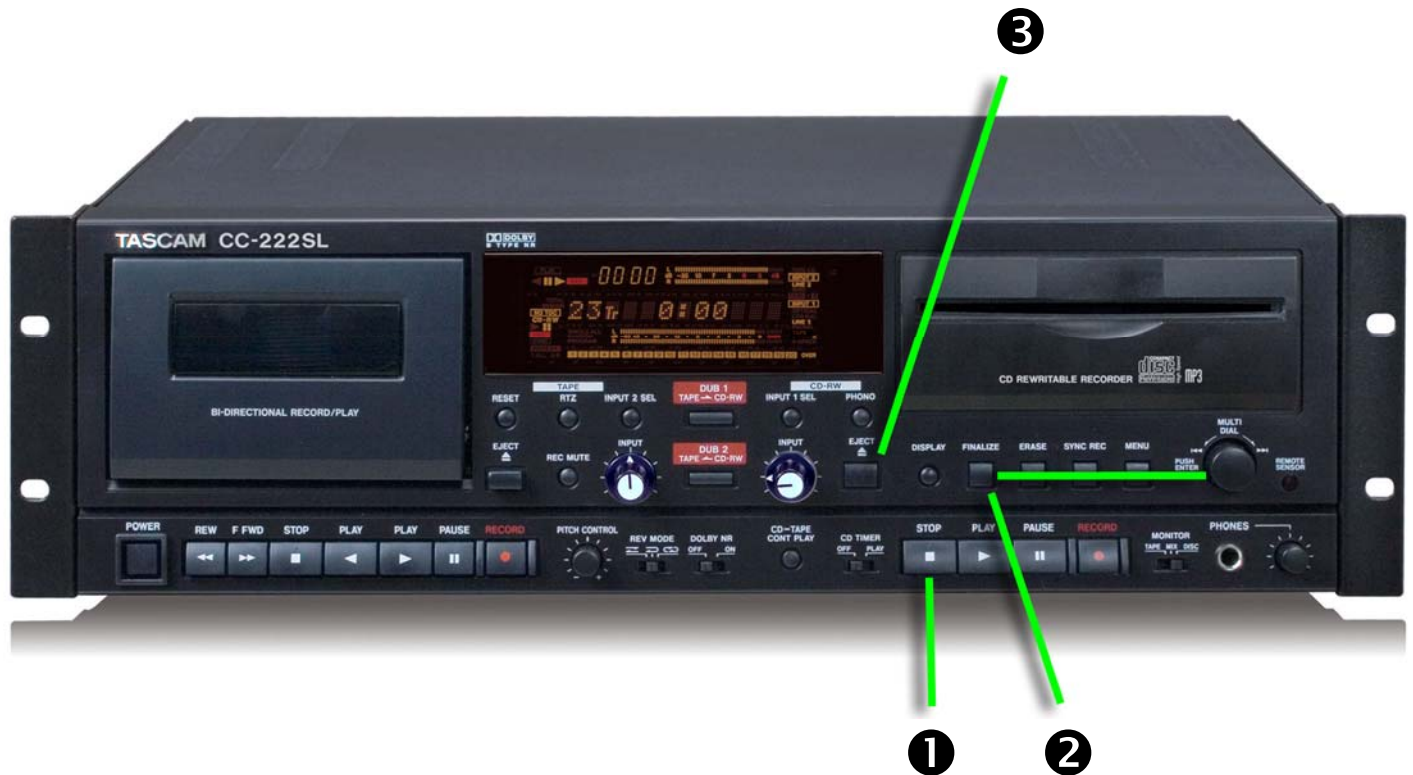

- 1 Press **STOP**. Do not eject the CD yet.

- 2 Press **FINALIZE**.

The display will prompt: "Fi nal i ze OK?"

To confirm, press the knob at the end of the row. (Do not turn it.)

The deck will count down the time to finish finalizing (about 1 minute).

- 3 After the CD is finalized, press **EJECT**. This may take a few more moments to complete.

(Forgot to finalize? Don't throw your disc away -- you can finalize it later.)